

MEITRACK Manager User Guide (New Version)

Applicable Model: Meitrack Products

Change History




File Name	MEITRACK Manager User Guide (New Version)		
Project		Creation Date Update Date	2023-10-19
Subproject	User Guide	Total Pages	27
Version	V1.0	Confidential	External Documentation

Contents

1 Copyright and Disclaimer	- 4 -
2 Product Overview	- 4 -
3 Hardware and Software Requirements	- 4 -
4 Installing and Running Meitrack Manager	- 4 -
5 Tracker Parameter Settings	- 5 -
5.1 Basic Settings	- 6 -
5.2 Tracking Settings	- 9 -
5.3 Geo-Fence Settings	- 12 -
5.4 Event Settings	- 13 -
5.5 Peripheral Settings	- 16 -
5.5.1 Binding the K211G to the T399G	错误!未定义书签。
5.5.2 Driver Fatigue Setting	错误!未定义书签。
5.6 Vehicle Maintenance Settings	错误!未定义书签。
5.7 Tire Pressure Settings	错误!未定义书签。
5.8 Fast Starting the MYCOM Tool	- 25 -
5.9 Fast Switching to the Device Info Dialog Box	- 25 -
5.10 Option Settings	- 26 -
6 MDVR Parameter Settings	错误!未定义书签。
6.1 Basic Settings	错误!未定义书签。
6.2 Tracking Settings	错误!未定义书签。
6.3 Geo-Fence Settings	错误!未定义书签。
6.4 Vehicle Maintenance Settings	错误!未定义书签。
6.5 Peripheral Settings	错误!未定义书签。
6.6 Event Settings	错误!未定义书签。
6.7 Network Settings	- 19 -
6.8 Video Settings	错误!未定义书签。

1 Copyright and Disclaimer

Copyright © 2023 MEITRACK. All rights reserved.

 ,  and  are trademarks that belong to Meitrack Group and its subsidiary.

The user manual may be changed without notice.

Without prior written consent of Meitrack Group, this user manual, or any part thereof, may not be reproduced for any purpose whatsoever, or transmitted in any form, either electronically or mechanically, including photocopying and recording.

Meitrack Group shall not be liable for direct, indirect, special, incidental, or consequential damages (including but not limited to economic losses, personal injuries, and loss of assets and property) caused by the use, inability, or illegality to use the product or documentation.

2 Product Overview

The Meitrack Manager software is used to configure parameters, read historical trips, and implement data backup and recovery for Meitrack terminals.


3 Hardware and Software Requirements


- A desktop computer or laptop whose operating system is Windows Vista, Windows 7, Windows 8, or Windows 10
- A USB cable
- MD201
- Meitrack Manager software

4 Installing and Running Meitrack Manager


1. Run **STM32 USB Driver** to install the driver.
2. Install Meitrack Manager as prompted.

Meitrack Manager requires **.Net Framework 4.52** to be installed. If it is not installed, the system will prompt to do so.

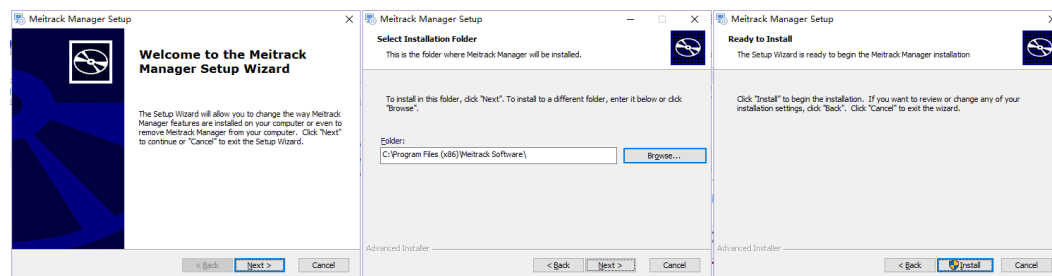

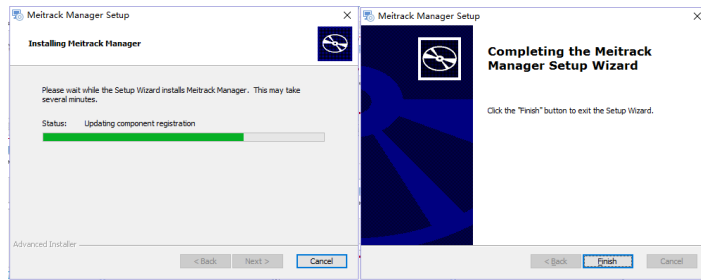


3. Connect the MD201 to a computer by using the USB cable.
4. Run Meitrack Manager. If the device is connected to the computer successfully and the auto connection mode has been set for Meitrack Manager, Meitrack Manager will automatically detect the port number and model of the device and read all the parameters of the device.

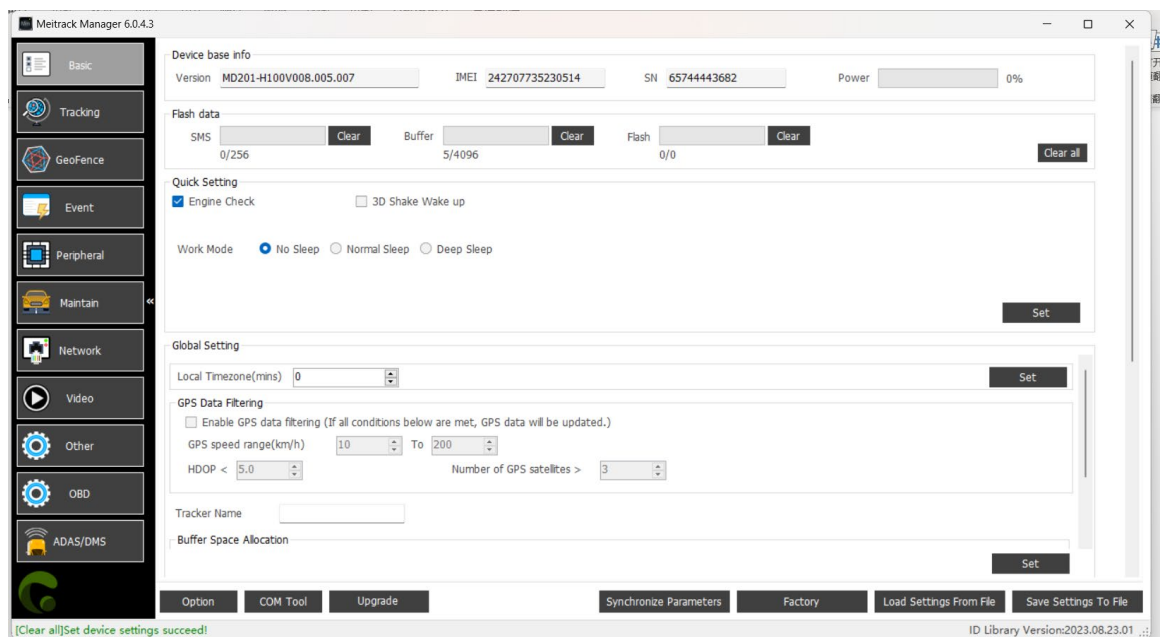

5 Tracker Parameter Settings

This chapter describes the Meitrack Manager functions. Each tracker has unique pages due to different functions. This chapter uses some figures of the debugging version of Meitrack Manager as an example, and the figures shown in this chapter are for reference only.

5.1 Basic Settings

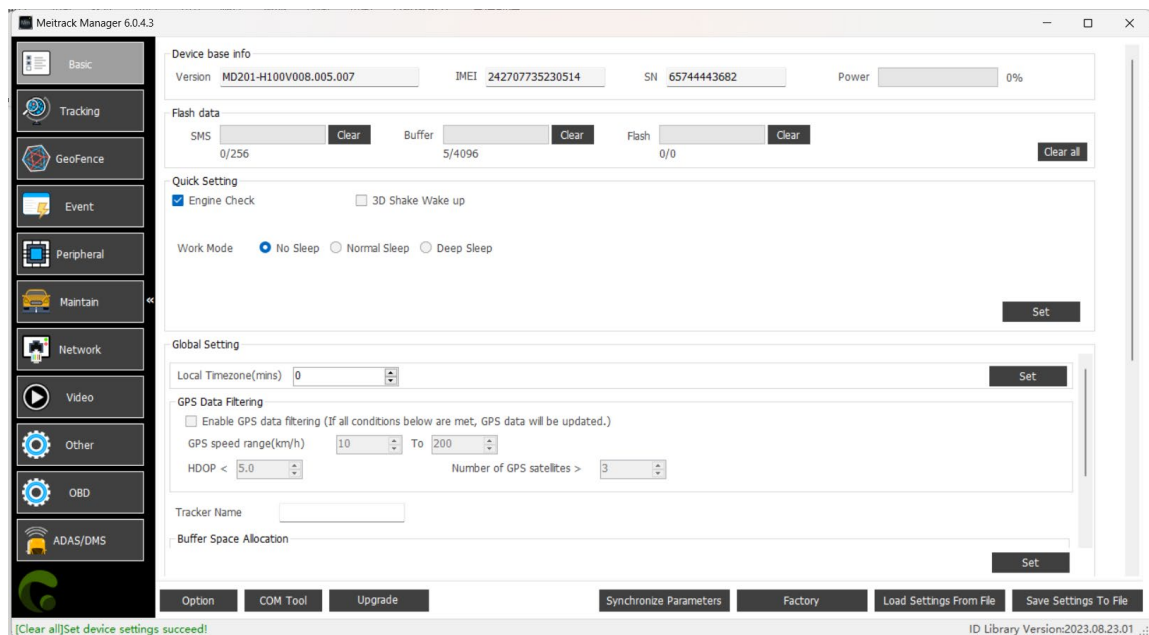


5.1.1 Driver base info



Driver base info	Description
Version	Includes the firmware version, device model, and firmware creation date. When new official firmware is released, you can compare the new firmware with the old one, and then check whether an upgrade is required. This field cannot be edited.
IMEI	Indicates the device's IMEI number. It is a unique number for the GPS tracking system and cannot be changed.
SN	Indicates the device's serial number (SN). It is a unique number for the product and cannot be changed.
Power	Indicates the remaining battery capacity of the internal battery. It is displayed by percentage.


5.1.2 Flash data

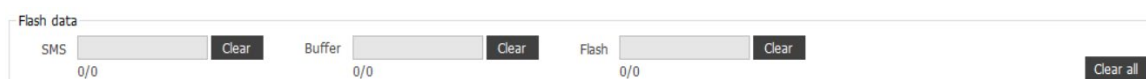

Flash data	Description
SMS	Indicates the number of SMS messages that fail to be sent. It is displayed in the form of "Cache quantity/Total data capacity". You can click Clear SMS to clear all cache. Cached data will be sent again when a valid GSM signal recovers.

Buffer	Indicates the quantity of GPRS data that fails to be sent. It is displayed in the form of " <i>Cache quantity/Total data capacity</i> ". You can click Clear buffer to clear all cache. Cached data will be sent again when a valid GSM signal recovers.
Flash	Indicates the quantity of data recorded by the GPS Logger. It is displayed in the form of " <i>Recorded data quantity/Total data capacity</i> ". You can click Clear flash to clear all recorded data. This releases storage space.
Clear all	Clear all cached GPRS data, SMS messages and recorded data at the same time.

5.1.3 Global Setting

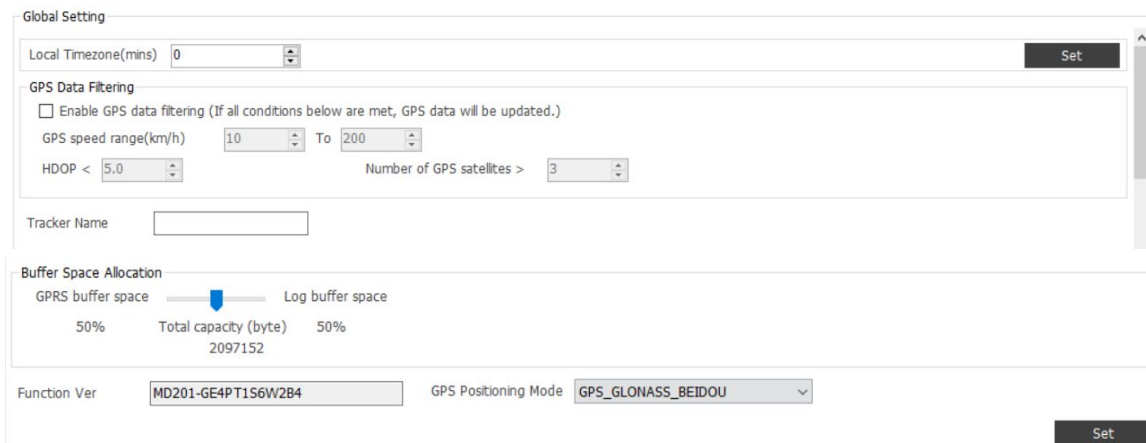

Global Setting	Description	Remarks
Local Timezone (mins)	Indicates the time characters shown among camera OSD characters or among SMS alert texts.	If the current time of the GMT 0 time zone is 12:00:00, set the local time zone to 480 minutes. Therefore, the OSD time shown on a camera is 20:00:00.
GPS Data Filtering	After you enable GPS data filtering, if all conditions of the GPS speed, GPS positioning accuracy, and number of GPS satellites are met, GPS data will be updated. The GPS data filtering function can eliminate static drift. Filtered data includes the GPS speed, GPS positioning accuracy, and number of GPS satellites.	
Tracker Name	Used to identify devices and not used for data transmission. This option can be defined by users	
Buffer Space Allocation	The storage percentage of GPRS and log cache will be showed. You can move the scroll bar to allocate the storage space.	
GPS Positioning Mode	You can select proper positioning mode based on usage conditions and environments. There are four positioning modes available: GPS+GLONASS GPS GPS+BEIDOU GPS+GALILEO GPS+ GALILEO+ GLONASS	

	GPS+ GLONASS+BEIDOU
	GPS+ GLONASS+BEIDOU+ GALILEO

5.1.4 System time synchronization settings

System time synchronization settings

Mode: NTP synchronization timeout(secs):

NTP server 1: NTP server 2:

Port: Port:

System time synchronization settings	Description
System time synchronization settings	1. Time calibration is carried out through GNSS. As long as GPS signal is found, the time is calibrated according to GMT time. 2. Time calibration can be performed through GNSS and NITZ.

5.1.5 System Power Settings

System Power Settings

Power off Delay(secs):

System Power Settings	Description
Power off Delay (secs)	Indicates the delay time of device power-off after the external power supply is cut off. (The delay time depends on the capacitance and working status of the device.)

5.1.6 System Maintain Settings

System Maintain Settings

Auto Reboot Day:

Auto Reboot Hour:

System Maintain Settings	Description
Auto Reboot Day and Auto Reboot Hour	Indicates the MDVR restart date and time. Auto Reboot Day: Every Day/Never/Monday to Sunday. Auto Reboot Hour: 24 Hours After the two parameters are set, the MDVR will restart according to the preset date and time.


5.1.7 Driver Info

Driver Info								
Disk	Driver Type	Current Disk	Free Space(MB)	Capacity(MB)	Free Space(%)	Error Flag	Driver Serial Number	Format Hard Disk
Disk1	Read-write	<input checked="" type="checkbox"/>	118874	127848	92.98%	No error	0	Format

Parameter	Description	Remarks
Driver Info	Disk	Indicates the disk number. For example, disk 1, which means the first disk.
	Driver Type	Indicates the memory permission, such as read and write.
	Current Disk	Indicates the current disk that stores data.
	Free Space (MB)	Indicates the remaining storage space of the current disk. Unit: MB.
	Capacity (MB)	Indicates the total storage space of the current disk. Unit: MB.
	Free Space (%)	Indicates the ratio of remaining storage space to total storage space.

	Error Flag	Show whether the disk works properly.	
	Driver Serial Number	Indicates the serial number of the mounted disk.	
	Format Hard Disk	Manually format the disk or SD card. If users' disk is full, click Format to delete and format the disk, so users can record new audio and videos.	After the device with a disk installed for the first time is turned on, the disk name will be automatically modified to the default system name.

5.2 Tracking Settings

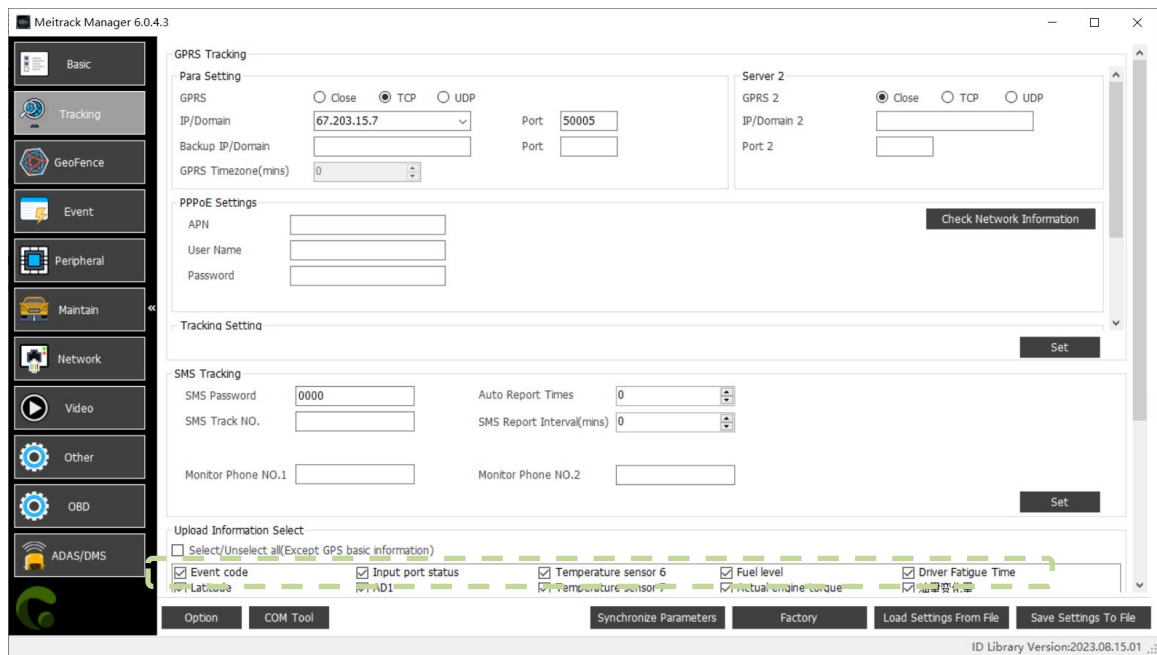

The screenshot shows the Meitrack Manager 6.0.4.3 interface with the Tracking settings tab selected. The interface includes a sidebar with navigation options: Basic, Tracking, GeoFence, Event, Peripheral, Maintain, Network, Video, Other, OBD, and ADAS/DMS. The main content area is divided into several sections:

- GPS Tracking**: Includes Para Setting (GPRS, IP/Domain, Backup IP/Domain, GPRS Timezone), Server 2 (GPRS 2, IP/Domain 2, Port 2), and PPPoE Settings (APN, User Name, Password).
- Tracking Setting**: Includes SMS Tracking (SMS Password, SMS Track NO., Auto Report Times, SMS Report Interval, Monitor Phone NO.1, Monitor Phone NO.2) and Upload Information Select (Event code, Input port status, Temperature sensor 6, Fuel level, Driver Fatigue Time).
- Buttons**: Option, COM Tool, Synchronize Parameters, Factory, Load Settings From File, and Save Settings To File.

The status bar at the bottom indicates the ID Library Version: 2023.08.15.01.

5.2.1 GPRS Tracking



This detailed view shows the GPRS Tracking settings section of the Meitrack Manager interface. It includes the following fields and options:

- Para Setting**:
 - GPRS: Radio buttons for Close, TCP (selected), and UDP.
 - IP/Domain: A dropdown menu showing 67.203.15.7.
 - Port: A text input field showing 50005.
 - Backup IP/Domain: An empty text input field.
 - Port: An empty text input field.
 - GPRS Timezone(mins): A spinner control set to 0.
- Server 2**:
 - GPRS 2: Radio buttons for Close (selected), TCP, and UDP.
 - IP/Domain 2: An empty text input field.
 - Port 2: An empty text input field.
- PPPoE Settings**:
 - APN: An empty text input field.
 - User Name: An empty text input field.
 - Password: An empty text input field.
 - Check Network Information: A button.

Tracking Setting

Protocol

Auto Event Report

GPRS Mode

Mode0

GPRS Report Time

0

GPS Log Interval(secs)

0

GPRS Interval

15

secs

GPRS Interval(ACC Off)

15

secs

Set

GPRS Tracking	Description
GPRS	<p>Close: Disable the GPRS scheduled uploading function.</p> <p>TCP: This is a reliable connection mode. You are advised to select this option.</p> <p>UDP: This mode saves data usage but is not reliable.</p>
Para setting	<p>Set the active server IP address and port.</p> <p>You can set the IP address to 67.203.15.7 and port to 50005.</p>
Server2	Configure the IP address and port number of the second server.
GPRS Time Zone	<p>When GPRS minute is 0, the time zone is GMT 0 (default time zone). Please set the GPRS time zone to 0 when you use our tracking platform.</p> <p>When GPRS minute is a value ranging from -32768 to 32767, set time zones.</p>
APN, Username, and Password	<p>Each parameter contains a maximum of 32 bytes. If no username and password are required, leave them blank.</p> <p><i>The APN of China Mobile is CMNET, and the APN of China Unicom is UNINET. Their usernames and passwords are left blank.</i></p>
Protocol	<p>The default value of this parameter is Auto Event Report.</p> <p>If you want to transmit other events, "Event report needs server's confirmation and delete the event report" option needs to work with the UDP. For details, see the <i>MEITRACK GPRS protocol</i>.</p>
GPRS Mode	GPRS mode: ACC ON, ACC OFF, Local, and Roaming
Mode 0	Mode 0 (T1): In this mode, T1 is the data uploading interval that is not restricted by any condition.
Mode 1	Mode 1 (T1 + T2): In this mode, T1 is the data uploading interval when the ACC is on, while T2 is the data uploading interval when the ACC is off.
GPRS Report Time	<p>Indicates the number of GPRS reporting times.</p> <p>When the number of times is 0, data can be reported for unlimited times.</p> <p>When the number of times is a value ranging from 1 to 65535, set the number of reporting times. When the number of reporting times reaches the preset value, reporting stops.</p>
GPS Log Interval	<p>The location information will be recorded by GPRS at a specific interval. This function is available when GPS is valid and there is no GSM signal (such as climbing). Therefore, this function is not recommended for normal conditions.</p>
GPRS Interval	Indicates the data uploading interval when the ACC is on.
GPRS Interval (ACC Off)	Indicates the data uploading interval when the ACC is off.

5.2.2 SMS Tracking

SMS Tracking	
SMS Password	<input type="text" value="0000"/>
SMS Track NO.	<input type="text"/>
Auto Report Times	<input type="text" value="0"/>
SMS Report Interval(mins)	<input type="text" value="0"/>
Monitor Phone NO.1	<input type="text"/>
Monitor Phone NO.2	<input type="text"/>
<input type="button" value="Set"/>	

SMS Tracking	Description
SMS Password	Indicates the password used for sending an SMS command. The default parameter value is 0000 .
SMS Time Zone	<p>The default time zone of the device is GMT 0. This option is used to change the time zone of SMS reports to the local time zone. The time zone of SMS reports is different from that of GPRS data packets.</p> <p>When SMS minute is 0, the time zone is GMT 0 (default time zone).</p> <p>When SMS minute is a value ranging from -32768 to 32767, set time zones. Unit: minute.</p> <p>For example, set the Beijing time zone to 480.</p>
SMS Tracking No.	<p>SMS Tracking No.: Indicates the phone number receiving SMS messages at a specified time interval.</p> <p>SMS Report Interval (mins): Report the device's location at a specified time interval by an SMS message.</p> <p>Set the SMS report time interval.</p> <ul style="list-style-type: none"> When the interval is 0, the scheduled SMS reporting function is disabled (default value). When the interval is a value ranging from 1 to 65535, set a time interval. Unit: minute. <p>Set the number of reporting times.</p> <ul style="list-style-type: none"> When the number of times is 0, data can be reported for unlimited times. <p>When the number of times is a value ranging from 1 to 65535, set the number of reporting times. When the number of reporting times reaches the preset value, reporting stops.</p>
Monitor Phone NO.	<p>When you call the device by using an authorized listen-in phone number, the device will answer the call automatically and enter the listen-in state. In the meanwhile, the device will not make any sound.</p> <p>A maximum of two phone numbers can be set. Each phone number has a maximum of 16 digits. If no phone numbers are set, leave them blank. Phone numbers are empty by default.</p>

5.2.3 Upload Information Select


Upload Information Select

☐ Select/Unselect all(Except GPS basic information)

<input checked="" type="checkbox"/> Event code	<input checked="" type="checkbox"/> Base station info	<input checked="" type="checkbox"/> Temperature sensor 1	<input checked="" type="checkbox"/> Cruise control	<input checked="" type="checkbox"/> Axle weight
<input checked="" type="checkbox"/> Latitude	<input checked="" type="checkbox"/> Output port status	<input checked="" type="checkbox"/> Temperature sensor 2	<input checked="" type="checkbox"/> Accelerator pedal position	<input checked="" type="checkbox"/> Service distance
<input checked="" type="checkbox"/> Longitude	<input checked="" type="checkbox"/> AD1	<input checked="" type="checkbox"/> Temperature sensor 3	<input checked="" type="checkbox"/> Total fuel used	<input checked="" type="checkbox"/> Instantaneous Fuel Economy
<input checked="" type="checkbox"/> Date and time	<input checked="" type="checkbox"/> AD2	<input checked="" type="checkbox"/> Temperature sensor 4	<input checked="" type="checkbox"/> Engine speed	<input checked="" type="checkbox"/> Magnetic Reader Card Info
<input checked="" type="checkbox"/> GPS positioning status	<input checked="" type="checkbox"/> AD3	<input checked="" type="checkbox"/> Temperature sensor 5	<input checked="" type="checkbox"/> Total engine hours	<input checked="" type="checkbox"/> AD6
<input checked="" type="checkbox"/> Number of satellites	<input checked="" type="checkbox"/> Battery voltage	<input checked="" type="checkbox"/> Temperature sensor 6	<input checked="" type="checkbox"/> High resolution vehicle distance	<input checked="" type="checkbox"/> Input port status(Extend)
<input checked="" type="checkbox"/> GSM signal strength	<input checked="" type="checkbox"/> External power supply voltage	<input checked="" type="checkbox"/> Temperature sensor 7	<input checked="" type="checkbox"/> Engine coolant temperature	
<input checked="" type="checkbox"/> Speed	<input checked="" type="checkbox"/> Gen-fence number	<input checked="" type="checkbox"/> Temperature sensor 8	<input checked="" type="checkbox"/> Fuel level	
<input checked="" type="checkbox"/> Driving direction	<input checked="" type="checkbox"/> System flag	<input checked="" type="checkbox"/> Vehicle speed (from tachograph)	<input checked="" type="checkbox"/> Actual engine torque	
<input checked="" type="checkbox"/> HDOP	<input checked="" type="checkbox"/> RFID Number	<input checked="" type="checkbox"/> Vehicle speed (wheel based)	<input checked="" type="checkbox"/> Ambient Air Temperature	
<input checked="" type="checkbox"/> Altitude	<input checked="" type="checkbox"/> Temperature sense of Numbers	<input checked="" type="checkbox"/> Clutch switch	<input checked="" type="checkbox"/> High Resolution Engine Total Fuel	
<input checked="" type="checkbox"/> Mileage	<input checked="" type="checkbox"/> Image name	<input checked="" type="checkbox"/> Tachograph performance	<input checked="" type="checkbox"/> Load at current speed	
<input checked="" type="checkbox"/> Run time	<input checked="" type="checkbox"/> Percentage of oil content	<input checked="" type="checkbox"/> Parking Brake Switch	<input checked="" type="checkbox"/> Engine Fuel Rate	

Upload Information Select	Description
Upload Information Select	Except for basic GPS information, you can select the information to be uploaded.


5.3 Geo-Fence Settings

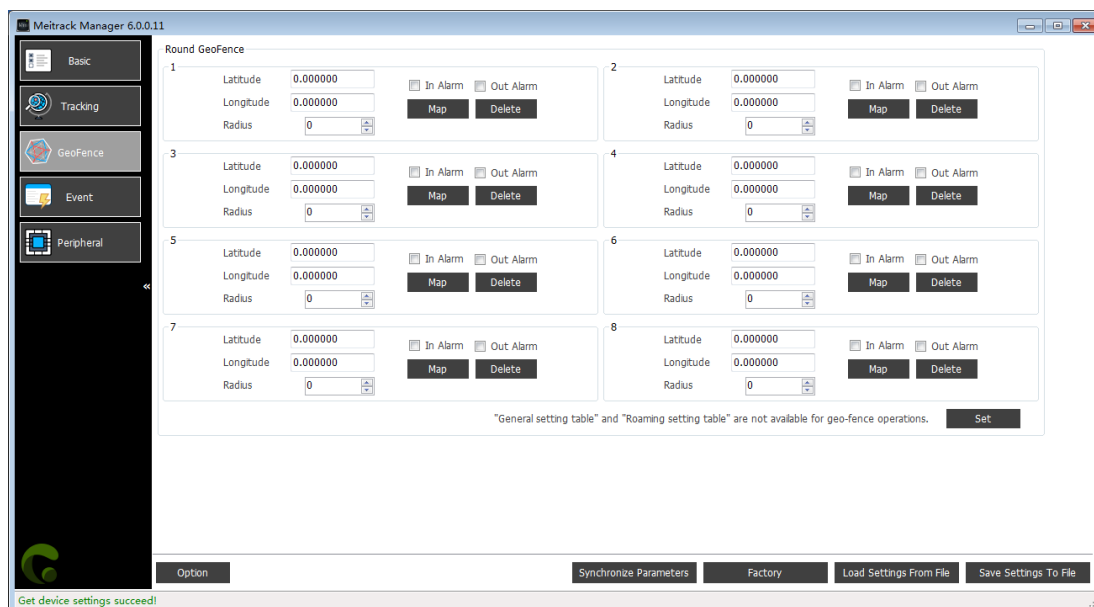

Parameter	Description
Geo-fence	<p>A maximum of eight circular geo-fences can be set.</p> <p>Enter a geo-fence: If you select In Alarm, an alert will be sent when the device enters a preset geo-fence.</p> <p>Exit a geo-fence: If you select Out Alarm, an alert will be sent when the device exits a preset geo-fence.</p> <p>You can enter parameter values in Latitude, Longitude, and Radius, or click Map to draw a geo-fence.</p> <p>If you want to delete a geo-fence, click Delete.</p>
Set	Save the parameter settings shown in the current column.

5.4 Event Settings

Drag the horizontal scroll bar right.

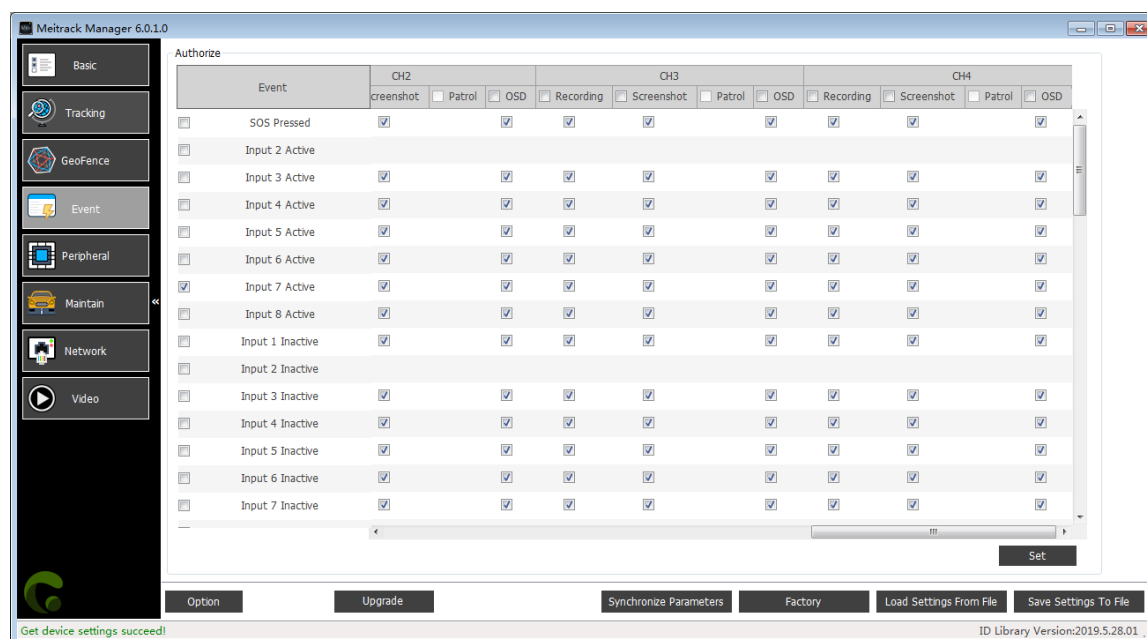

Parameter	Description	Remarks
Event	The selected event reports will be sent to the server through GPRS. For details, see the <i>MEITRACK GPRS Protocol</i> and <i>MEITRACK SMS Protocol</i> . For details about event descriptions, see the following table.	If you tick a check box on the left side of an event, all vertical options of the event will be selected.
Alarm Header	Indicates the header information of an SMS alert and has a maximum of 15 characters.	After the alert header information is modified, it will be shown in an SMS message with an alert event.
Setting	Set the threshold of an event. For example, set the speeding event value to 50 km/h. When the driving speed exceeds the preset value, a speeding alert will be sent.	When you hover your mouse over the "..." button, a floating parameter settings window pops up.
SMS	Tick the check box of a corresponding event. After this option is selected, if the event is generated, the device will send an event report through SMS to an authorized phone number. (On the box above SMS , set a phone number.)	
GPRS	Tick the check box of a corresponding event. After this option is selected, if the event is generated, the device will send a GPRS event report to the server. Note: If you tick the first check box under GPRS , all events	

		with the GPRS function will be selected.	
FTP		Tick the check box of a corresponding event. After the FTP server is configured, when the alarm linkage recording and snapshot are triggered, video and pictures will be automatically uploaded to the FTP server	
Log		Reserved	
Tip		Reserved	
Alarm Output	1	You can set output ports 1–3. When some alert events are generated, output ports can be used to trigger the high level, low level, or PWM wave. Triggering mode: high level, low level, and PWM Unit of output time: 10 ms Duty cycle range: 0%–100% Unit of PWM period: μ s	For more information about how to configure the output port mode, see the section 6.5 "Peripheral Settings."
	2		
	3		
Record Delay (secs)		Indicates the recording time of audio or video recordings after an event is generated. The default time 300 seconds.	
CH1/2/3/4	Video	After an alert is generated, the device will record audio and a video in the current channel. The recording time depends on the recording delay time.	On the Video tab page, locate DVR Basic Settings > Alarm Snapshot Number to modify the number of photos.
	Shoot	After an alert is generated, the device will take photos. By default, 10 photos are taken.	
	Tour	Reserved	
	OSD	When the alarm is triggered, the alarm type will be shown on video screen	

Event descriptions:

Event	Description
SOS Pressed	When input 1 is activated (or the SOS button is pressed), an alert will be sent.
Input 2/3/4/5/6/7/8 Active	When input n is activated, an alert will be sent. The value of n is 2, 3, 4, 5, 6, 7, or 8 .
Input 1 Inactive (SOS Released)	When input 1 is not activated (or the SOS button is released), an alert will be sent.
Input 2/3/4/5/6/7/8 Inactive	When input n is not activated, an alert will be sent. The value of n is 2, 3, 4, 5, 6, 7, or 8 .
Low External Battery	When the voltage of the external power supply (vehicle battery) is lower than the preset value, an alert will be sent. You can change the low battery threshold in the Setting column.
Speeding	When the driving speed exceeds the preset value, an alert will be sent. You can change the speeding threshold in the Setting column.
Enter Geo-fence	When the device enters a preset geo-fence, an alert will be sent.
Exit Geo-fence	When the device exits a preset geo-fence, an alert will be sent.
External Battery On	When the vehicle battery is properly connected to the device, an alert will be sent.

External Battery Cut	When the vehicle battery power is cut off, an alert will be sent.
GPS Signal Lost	When the device enters a GPS blind spot or no valid GPS signal is received, an alert will be sent.
GPS Signal Recovery	When the device exits a GPS blind spot or a valid GPS signal is received, an alert will be sent.
Enter Sleep	When the device enters the sleep mode, an alert will be sent.
Exit Sleep	When the device is woken up from the power-saving mode, an alert will be sent. You can modify the sleep mode in the Setting column.
GPS Antenna Cut	The external GPS antenna is not connected or is cut off.
Device Reboot	After the device is turned on, an event report will be sent.
Heartbeat	Enable the heartbeat report function. You can change the heartbeat packet interval in the Setting column.
Cornering	Enable the cornering report function. When the driving angle exceeds the preset value, a cornering report will be sent. You can change the cornering angle threshold in the Setting column.
Track by Distance	Track by distance. You can change the distance threshold in the Setting column.
Reply Current (Passive)	When the device receives a call or an SMS from an authorized phone number, the current location will be replied.
Track By Time Interval	Track by time interval. You can change the time interval on the Tracking tab page.
Tow	When the device enters the deep sleep mode, if the vibration time exceeds the preset value, a towing alert will be sent. You can change the consecutive vibration time for a towing alert in the Setting column.
RFID	Connect the device to the RFID reader to obtain the RFID card number.
Stop Moving	After this function is enabled, if the device stops moving, an event report will be sent.
Start Moving	After this function is enabled, if the device starts moving, an event report will be sent.
Temperature High	When the temperature of the temperature sensor is higher than the preset upper limit, an alert will be sent.
Temperature Low	When the temperature of the temperature sensor is lower than the preset lower limit, an alert will be sent.
Full Fuel	When the fuel level of the fuel level sensor exceeds the preset upper limit, an alert will be sent.
Low Fuel	When the fuel level of the fuel level sensor is less than the preset lower limit, an alert will be sent.
Fuel Theft	When the fuel level reduces by over 2% within three minutes (default time), an alert will be sent.
Fuel Filling	When the fuel level increases by over 2% within three minutes (default time), an alert will be sent.

Ult-Sensor Drop	While the fuel level sensor works properly, if its probe is disconnected from the fuel tank, an alert will be sent.
Output 1/2/3 Active	When output n is activated, an alert will be sent. The value of n is 1 , 2 , or 3 .
Output 1/2/3 Inactive	When output n is not activated, an alert will be sent. The value of n is 1 , 2 , or 3 .
Harsh Braking	Harsh braking alerts help analyze drivers' driving habits. The alert value is a negative number. After this function is enabled, if the driving speed reaches the preset value, an alert will be sent.
Harsh Acceleration	Harsh acceleration alerts help analyze drivers' driving habits. The alert value is a positive number. After this function is enabled, if the driving speed reaches the preset value, an alert will be sent.
CH1/2/3/4 Video Loss	While the camera works properly, if the camera is disconnected from the device, a video lost alert will be sent.
Storage Error	When a HDD or SD card is not inserted into the device or a read or write error occurs, an alert will be sent.
Full Storage	When the usage space of the memory reaches the storage threshold (percentage), an alert will be sent.
Driving Behavior	Fatigue driving alarm event
CH1/2/3/4 Video Recovery	The camera is reconnected to the device and working properly

5.5 Peripheral Settings

Meitrack Manager 6.0.4.3

- Basic
- Tracking
- GeoFence
- Event
- Peripheral
- Maintain
- Network
- Video
- Other
- OBD
- ADAS/DMS

IO Config

IN1
Type: Input | 1 | Trigger Mode: Negative

IN2
Type: Input | 2 | Trigger Mode: Positive

IN3
Type: Input | 3 | Trigger Mode: Positive

IN4/AD2
Type: Input | 4 | Trigger Mode: Positive

ACC/IGN
Type: Input | 5 | Trigger Mode: Positive

AD1
Type: Input | 1 | Trigger Mode: AD Input

OUT1
Type: Output | 1 | Trigger Mode: Low level | Trigger Time(10ms): 100

OUT2
Type: Output | 2 | Trigger Mode: Low level | Trigger Time(10ms): 100

SPEED_IN
Type: Speedomete | 1 | Trigger Mode: 推挽模式

RPM_IN
Type: Speedomete | 2 | Trigger Mode: 开漏模式

Set

Parameter	Description
IO Config	<p>You can select the I/O port type and trigger mode.</p> <p>When Input is selected from the Type drop-down list, you can set Trigger Mode to Positive, Negative, or AD Input. Positive and negative trigger modes are used to detect the SOS, ACC status, and vehicle door status, while the AD input is used to connect to an AD sensor, such as the fuel level sensor.</p> <p>When Output is selected from the Type drop-down list, you can set Trigger Mode to High level, Low level, or PWM, and can set the trigger time, duty cycle and PWM period. The output port is used to connect to the buzzer to remind drivers or connect to an external relay to remotely cut off the vehicle fuel cable and engine power supply.</p> <p>When 1-Wire is selected from the Type drop-down list, it is used to connect to the A52 digital temperature sensor or iButton by default by using the A61 sensor box</p>
Peripheral	<p>RS232 peripherals are supported.</p> <p>RS232 peripherals include the RFID reader and ultrasonic fuel level sensor.</p> <p>In the Setting drop-down list, you can select Baud rate and set the baud rate value.</p>
Fuel Sensor	<p>The device can connect to the C-type fuel level sensor, V-type fuel level sensor, R-type fuel level sensor, and ultrasonic fuel level sensor.</p> <p>You can set high and low fuel alert percentage. When the fuel percentage is greater than or lower than the preset value, a high fuel alert or a low fuel alert will be sent respectively.</p> <p>When the ultrasonic fuel level sensor selected, users can set the full fuel and empty fuel values as required.</p> <p>When the fuel level increases or reduces by over 2% within three minutes (default time), a fuel filling alert or fuel theft alert will be sent respectively. You can set the percentage as required.</p>

RFID Operation Setting	<p>From the RFID Number: The hexadecimal or decimal data format can be selected.</p> <p>Quantity: RFID card numbers can be authorized in batches. A maximum of 64 RFID cards can be authorized at a time. For example, after the From the RFID Number parameter is set to 1234 and the Quantity parameter is set to 5, the RFID card numbers from 1234 to 1239 are authorized.</p> <p>Query Single: Click the Query Single button to query whether an RFID card number is authorized.</p> <p>Delete: Click the Delete button to delete authorized RFID card numbers.</p> <p>Set: After entering the RFID card start number and quantity, click the Set button to authorize these RFID card numbers in batches.</p>
------------------------	--

5.6 Maintain

After this function is enabled, if the driving distance or time reaches the preset value, an event report will be sent.

Meitrack Manager 6.0.4.3

- Basic
- Tracking
- GeoFence
- Event
- Peripheral
- Maintain

Maintenance Notice

Last Maintenance Mileage(km)

Last Maintenance Date

First Maintenance Mileage(km)

Maintenance Cycle(km)


Maintenance Cycle(Month)

Maintenance Mileage Point(km)

Maintenance Date

Maintenance Notice	Description
Last Maintenance Mileage (km) and Last Maintenance Date	<p>Set the most recent vehicle maintenance mileage and date.</p> <p>If the vehicle has never been maintained, set Last Maintenance Mileage (km) to 0 and Last Maintenance Date to the vehicle purchase date.</p>
First Maintenance Mileage (km) and Maintenance Cycle (km)	After the two parameters are set, if the driving distance reaches the preset value, a maintenance warning will be sent.
Maintenance Cycle (Month)	After the parameter is set, if the device running time reaches the preset value, a maintenance warning will be sent.
Maintenance Mileage Point (km) and Maintenance Date	<p>Maintenance mileage point = Last maintenance mileage + Maintain Cycle(km)</p> <p>There are eight mileage points in total.</p> <p>Maintenance time point = Last maintenance date + Maintenance Cycle (Month)</p> <p>There are eight maintenance time points in total.</p>

5.7 Network Settings

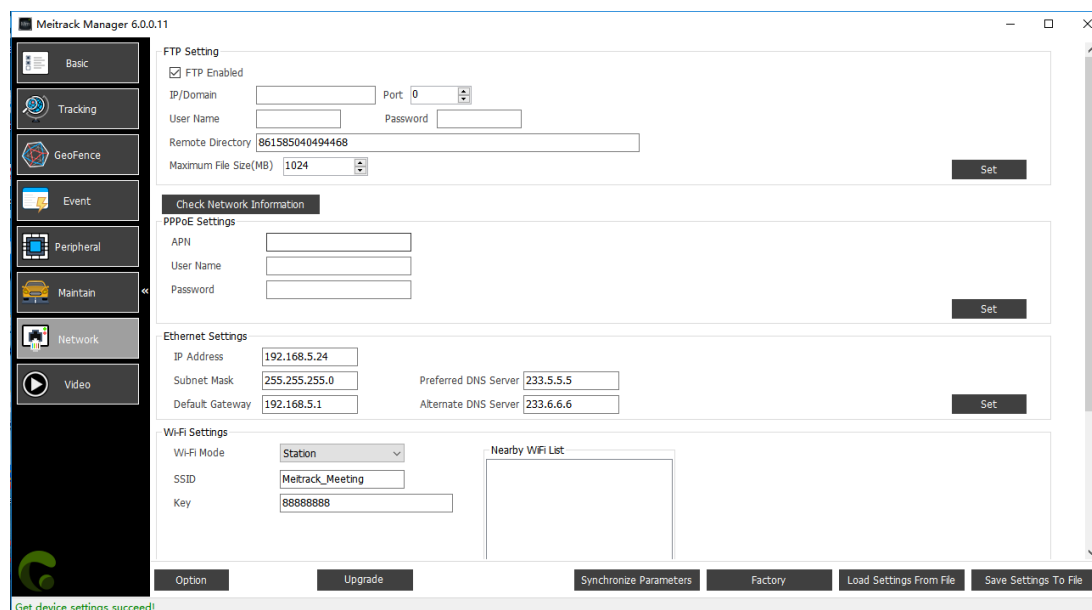

Meitrack Manager 6.0.0.11

FTP Setting

☒ FTP Enabled

IP/Domain: Port:

User Name: Password:

Remote Directory: 86158504094468

Maximum File Size(MB): 1024

Check Network Information

PPPoE Settings

APN:

User Name:

Password:

Ethernet Settings

IP Address: 192.168.5.24

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.5.1

Preferred DNS Server: 233.5.5.5

Alternate DNS Server: 233.6.6.6

Wi-Fi Settings

Wi-Fi Mode: Station

SSID: Meitrack_Meeting

Key: 88888888

Nearby WiFi List:


Option Upgrade Synchronize Parameters Factory Load Settings From File Save Settings To File

Get device settings succeed!

Parameter		Description	Remarks
FTP Setting	FTP Enabled	Enable or disable the FTP function of uploading alert videos and snapshots.	
	IP/Domain and Port	Indicates the FTP server host name (IP address/domain name) and port.	
	Username and Password	Indicates the FTP server username and password.	
	Remote Directory	Indicates the file storage directory of the FTP server. By default, the device's IMEI number is used as the file storage directory name of the FTP server.	
	Maximum File Size (MB)	Indicates the maximum size of files to be uploaded to the FTP server. The default value is 1024 MB.	Users can set the parameter based on their network and system resources.
PPPoE Settings	APN, Username, and Password	Set mobile network connections. Enter the Access Point Name (APN) and login account. If no user name and password are required, leave them blank.	
Ethernet Settings	IP address, Subnet Mask, and Default Gateway	Enter the static IP address, subnet mask and default gateway of a local area network (LAN). The network status can be queried by Meitrack Manager, sending a command, or running the ipconfig command on the computer with a Windows system installed.	If you want to view the network status by Meitrack Manager, click Check Network Information on the Network tab page.
	Preferred DNS Server and Alternate DNS	Indicates the address of a DNS server. The default server is an Alibaba Cloud DNS server (address: 233.5.5.5 or 233.6.6.6).	

	Server		
Wi-Fi Settings	Wi-Fi Mode	The Station mode is supported. The MDVR uploads data by a valid WiFi hotspot. If the parameter is not set, it means that the wireless WiFi function of the MDVR is disabled.	
	SSID	Indicates the name of a wireless network. You can select a wireless network from Nearby WiFi List or manually enter the name.	
	Key	Enter the password of a WiFi hotspot.	
Route Mode		Select a MDVR network connection mode. If Auto is selected, the MDVR will first detect the Ethernet network, then the WiFi network, and finally the GSM network.	

5.8 Video Settings

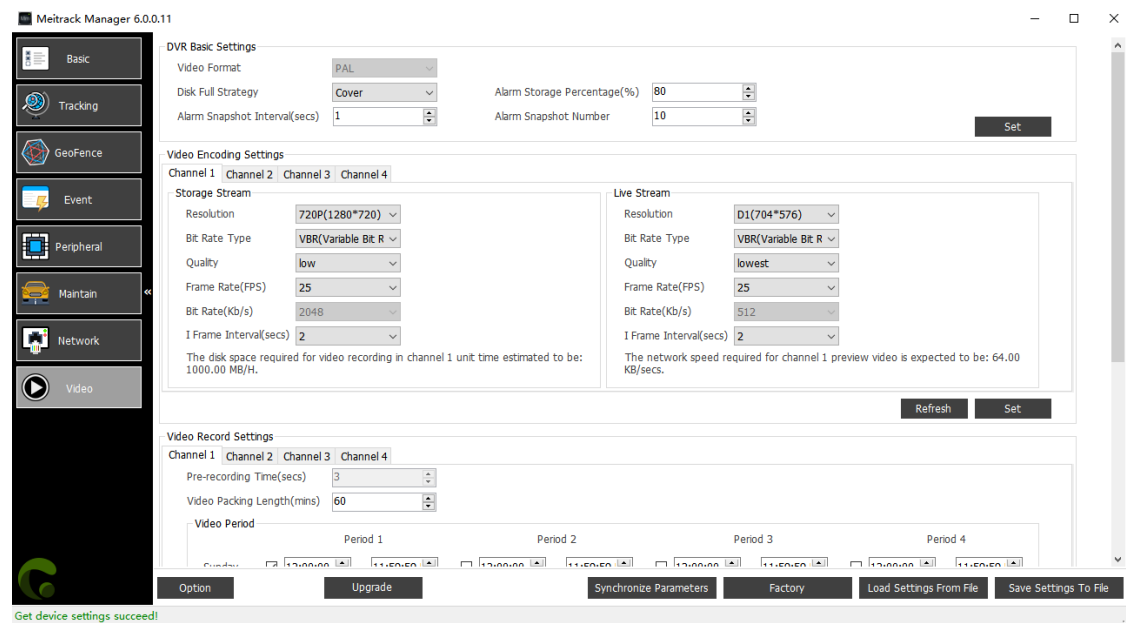


The screenshot shows the 'Video Settings' window in Meitrack Manager 6.0.0.11. The interface is divided into several sections:

- DVR Basic Settings:** Includes Video Format (PAL), Disk Full Strategy (Cover), Alarm Storage Percentage (%) (80), Alarm Snapshot Interval (secs) (1), and Alarm Snapshot Number (10). A 'Set' button is at the bottom right.
- Video Encoding Settings:**
 - Channel 1:** Storage Stream settings include Resolution (720P(1280*720)), Bit Rate Type (VBR(Variable Bit R)), Quality (low), Frame Rate(FPS) (25), Bit Rate(Kb/s) (2048), and I Frame Interval(secs) (2). A note states: 'The disk space required for video recording in channel 1 unit time estimated to be: 1000.00 MB/H.'.
 - Live Stream:** Settings include Resolution (D1(704*576)), Bit Rate Type (VBR(Variable Bit R)), Quality (lowest), Frame Rate(FPS) (25), Bit Rate(Kb/s) (512), and I Frame Interval(secs) (2). A note states: 'The network speed required for channel 1 preview video is expected to be: 64.00 KB/secs.'.
 - 'Refresh' and 'Set' buttons are at the bottom right.
- Video Record Settings:**
 - Channel 1:** Pre-recording Time(secs) (3) and Video Packing Length(mins) (60).
 - Video Period:** A table with 4 periods, each showing a time range (e.g., Period 1: 00:00:00 - 00:00:00).
 - Buttons at the bottom: Option, Upgrade, Synchronize Parameters, Factory, Load Settings From File, and Save Settings To File.

A status bar at the bottom left indicates 'Get device settings succeed!'.

Drag the vertical scroll bar down.

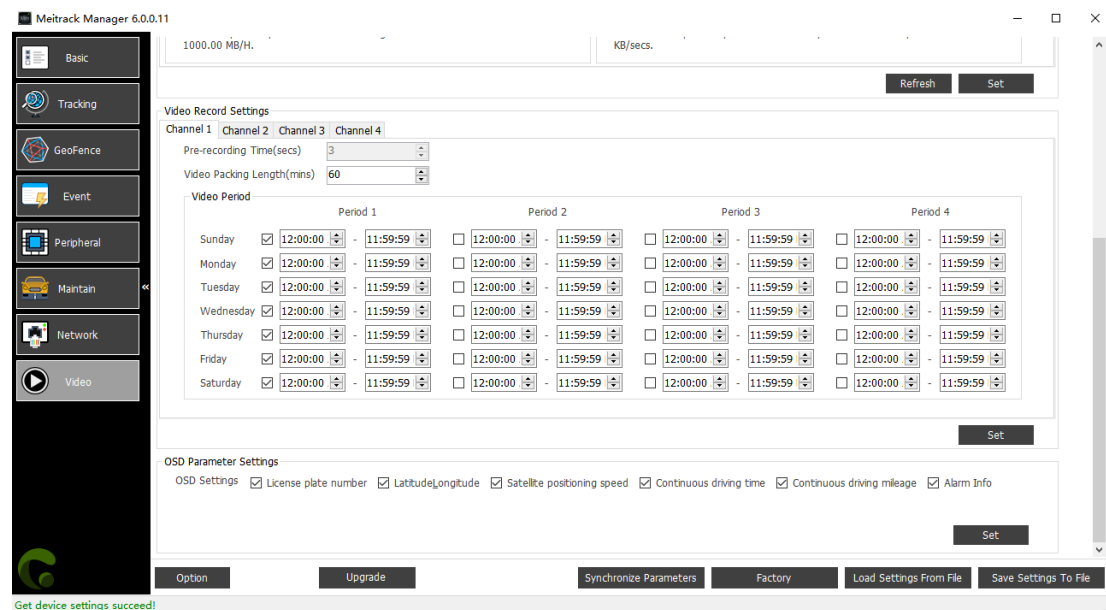


Parameter		Description	Remarks
DVR Basic Settings	Video Format	The video format is the Phase Alternating Line (PAL). This option cannot be edited.	
	Disk Full Strategy	Indicates the measure taken after the disk is full. You can stop recordings or replace old videos with new ones. By default, Cover is selected.	
	Alarm Snapshot Interval (secs)	Set the interval of taking photos for an alert.	
	Alarm Storage Percentage (%)	When the usage space of all disks reaches the preset percentage value, a full disk alert will be sent. In this way, users can replace the disks with new ones or organize files on the disks to prevent video losses.	
	Alarm Snapshot Number	Indicates the number of camera photos for an alert. By default, 10 photos are taken.	
Video Encoding Settings (Storage Stream and Live Stream)	Resolution	Set the resolution of videos (storage stream or live stream). Default storage stream resolution: 720P; default live stream resolution: D1.	
	Bit Rate Type	Set the bitrate type. The default type is the variable bitrate (VBR). When a video image is still, the device can reduce the bitrate, which helps save data usage. For the constant bitrate (CBR), data consumption is relatively constant and is not affected by images.	
	Quality	Set the video image quality. There are six image quality levels. The image quality of storage streams is average by default. The better the	

		image quality is, the larger the video size is.	
	Frame Rate (FPS)	Frame rate is the frequency (rate) at which consecutive images called frames appear on a display. The larger the number of frames is, the smoother videos are.	
	Bit Rate (Kb/s)	The parameter value is automatically set by default based on image quality. (If users want to change the value, set the bitrate type to the CBR.)	
	I Frame Interval (secs)	Indicates the interval of keyframes of moving images. The smaller the interval is, the more lifelike the moving images are. Common users do not need to change the default parameter value.	
Video Record Settings (Channel <i>n</i>)	Pre-recording Time (secs)	Indicates the start recording time before an alert is generated.	With pre-recording time, users can view videos recorded before an alert is generated.
	Video Packing Length (mins)	Package audio and video files based on the preset time, except for alarm videos	
	Video Period	Set the recording time. By default, after all cameras are turned on, they will start recording.	
OSD Parameter Settings		All vehicle information is selected by default, but users can select the information to be shown on the video screen as required.	

5.9 Other

Meitrack Manager 6.0.4.3

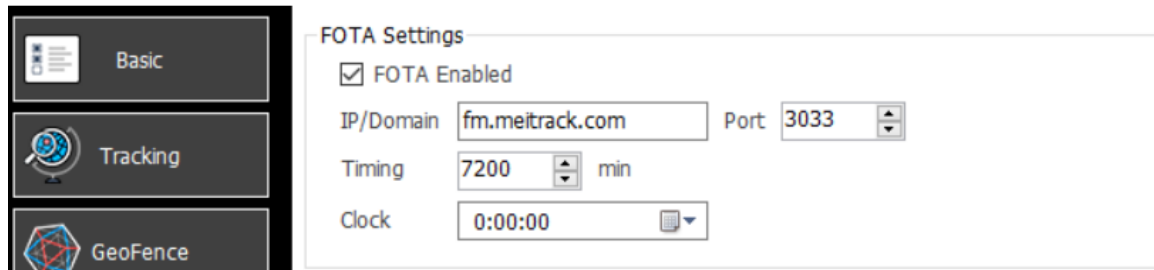

FOTA Settings	Description
FOTA Settings	1. Whether to enable FOTA function; 2. Set up the FOTA server. 3. Clock: Set the device to periodically connect to the FOTA server

5.10 OBD


OBD Parameters Setting

Vehicle Displacement(T)

OBD Parameters Sstting	Description
------------------------	-------------

Vehicle Displacement(T)	Set the car displacement for OBD data detection.
-------------------------	--

5.11 ADAS/DMS

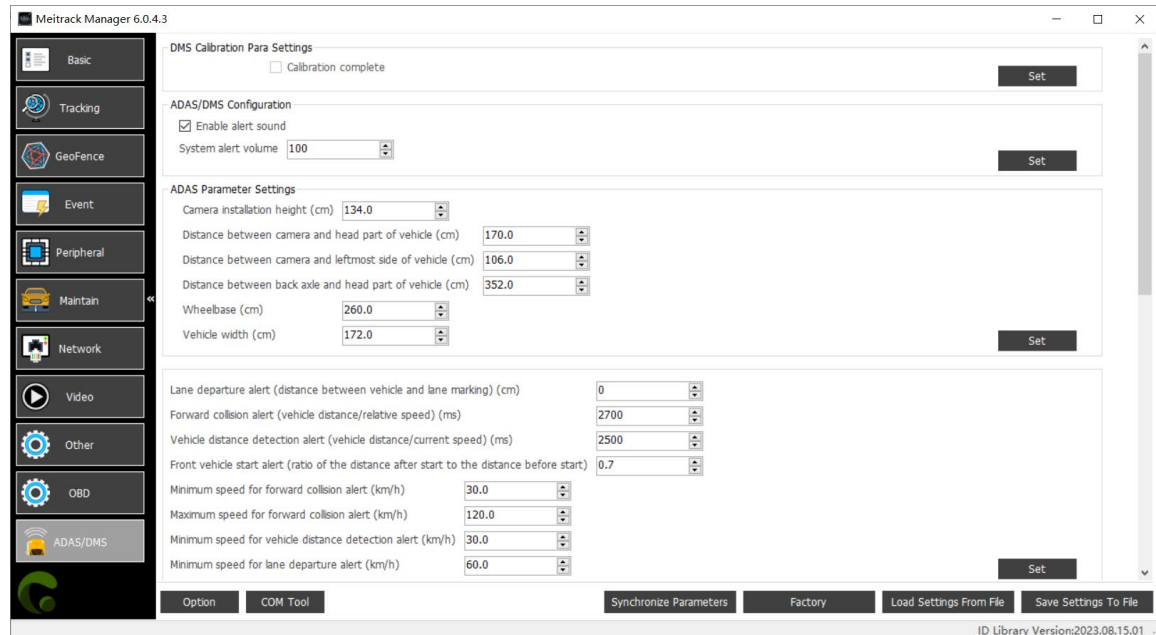

Meitrack Manager 6.0.4.3

Basic | Tracking | GeoFence | Event | Peripheral | Maintain | Network | Video | Other | OBD | **ADAS/DMS**

DMS Calibration Para Settings
☐ Calibration complete Set


ADAS/DMS Configuration
☒ Enable alert sound
 System alert volume: 100 Set

ADAS Parameter Settings
 Camera installation height (cm): 134.0
 Distance between camera and head part of vehicle (cm): 170.0
 Distance between camera and leftmost side of vehicle (cm): 106.0
 Distance between back axle and head part of vehicle (cm): 352.0
 Wheelbase (cm): 260.0
 Vehicle width (cm): 172.0 Set

Lane departure alert (distance between vehicle and lane marking) (cm): 0
 Forward collision alert (vehicle distance/relative speed) (ms): 2700
 Vehicle distance detection alert (vehicle distance/current speed) (ms): 2500
 Front vehicle start alert (ratio of the distance after start to the distance before start): 0.7
 Minimum speed for forward collision alert (km/h): 30.0
 Maximum speed for forward collision alert (km/h): 120.0
 Minimum speed for vehicle distance detection alert (km/h): 30.0
 Minimum speed for lane departure alert (km/h): 60.0 Set

Option COM Tool Synchronize Parameters Factory Load Settings From File Save Settings To File

ID Library Version:2023.08.15.01

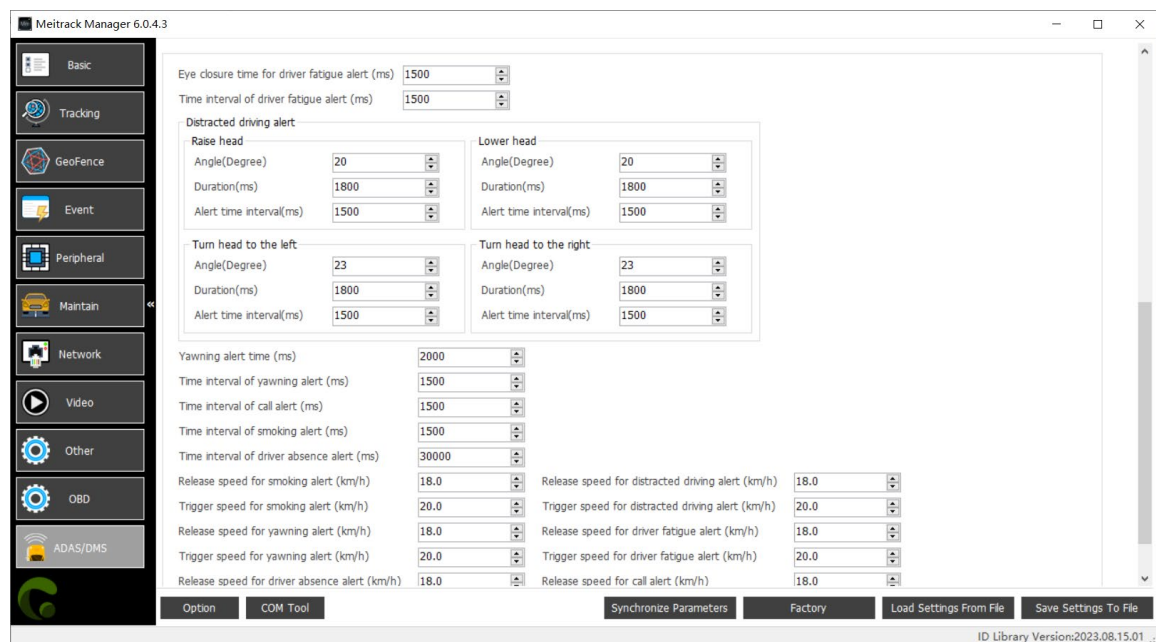

Meitrack Manager 6.0.4.3

Basic | Tracking | GeoFence | Event | Peripheral | Maintain | Network | Video | Other | OBD | **ADAS/DMS**

Eye closure time for driver fatigue alert (ms): 1500
 Time interval of driver fatigue alert (ms): 1500

Distracted driving alert

Raise head
 Angle(Degree): 20
 Duration(ms): 1800
 Alert time interval(ms): 1500

Lower head
 Angle(Degree): 20
 Duration(ms): 1800
 Alert time interval(ms): 1500

Turn head to the left
 Angle(Degree): 23
 Duration(ms): 1800
 Alert time interval(ms): 1500

Turn head to the right
 Angle(Degree): 23
 Duration(ms): 1800
 Alert time interval(ms): 1500

Yawning alert time (ms): 2000
 Time interval of yawning alert (ms): 1500
 Time interval of call alert (ms): 1500
 Time interval of smoking alert (ms): 1500
 Time interval of driver absence alert (ms): 30000
 Release speed for smoking alert (km/h): 18.0
 Trigger speed for smoking alert (km/h): 20.0
 Release speed for yawning alert (km/h): 18.0
 Trigger speed for yawning alert (km/h): 20.0
 Release speed for driver absence alert (km/h): 18.0

Release speed for distracted driving alert (km/h): 18.0
 Trigger speed for distracted driving alert (km/h): 20.0
 Release speed for driver fatigue alert (km/h): 18.0
 Trigger speed for driver fatigue alert (km/h): 20.0
 Release speed for call alert (km/h): 18.0

Option COM Tool Synchronize Parameters Factory Load Settings From File Save Settings To File

ID Library Version:2023.08.15.01

ADAS/DMS Configuration	Description
Enable alert sound	Whether to turn on ADAS\DMS alarm sound
System alert volume	Set the size of the sound
ADAS Parameter Settings	Used to set ADAS calibration parameters and vehicle dimensions.


ADAS alarm detection parameter	Description
Lane departure alert (distance between vehicle and lane marking) (cm)	The default value is recommended. If it is prone to false positives, you can increase it slightly.
Forward collision alert (vehicle distance/relative speed) (ms)	The default value is recommended. Detect the speed between the car in front, 2700 milliseconds will collide.
Vehicle distance detection alert (vehicle distance/current speed) (ms)	The default value is recommended. The distance from the vehicle in front and the speed of the device calculate the time. The longer the time, the greater the detection distance.
Front vehicle start alert (ratio of the distance after start to the distance before start)	The default value is recommended.
Minimum speed for forward collision alert (km/h)	If the value is greater than the set value, an alarm will be generated.
Maximum speed for forward collision alert (km/h)	If the value is lower than the set value, an alarm is generated.
Minimum speed for vehicle distance detection alert (km/h)	If the value is greater than the set value, an alarm will be generated.
Minimum speed for lane departure alert (km/h)	If the value is greater than the set value, an alarm will be generated.

DMS alarm detection parameter	Description
Eye closure time for driver fatigue alert (ms)	Detect eye closing time.
Time interval of driver fatigue alert (ms)	Detect the time interval of fatigue alarm.
Distracted driving alert	Set the detection parameters of Raise head, Lower head, Turn head to the left, and Turn head to the right. The default value is recommended when DMS is facing the face. If the installation is not frontal, data adjustment must be made.
Yawning alert time (ms)	Yawn detection time. Exceeding the set time will generate an alarm.
Time interval of yawning alert (ms)	The interval between each yawn and the alarm.
Time interval of call alert (ms)	Detect the time interval between calls to the alarm.
Time interval of smoking alert (ms)	Detect the interval between smoking alarms.
Time interval of driver absence alert (ms)	Detect the driver absence alarm interval.
Release speed for smoking alert (km/h)	Below the set speed, the smoking alarm will be deactivated.
Trigger speed for smoking alert (km/h)	If the speed is higher than the set, the smoking alarm detection will be enabled.
Release speed for yawning alert (km/h)	Below the set speed, the yawn alarm will be lifted.
Trigger speed for yawning alert	If the speed is higher than the set, the yawning alert detection will be

(km/h)	enabled.
Release speed for driver absence alert (km/h)	Below the set speed, the driver absence alert will be lifted.
Trigger speed for driver absence alert (km/h)	If the speed is higher than the set, the driver absence alert detection will be enabled.
Release speed for distracted driving alert (km/h)	Below the set speed, the distracted driving alert will be lifted.
Trigger speed for distracted driving alert (km/h)	If the speed is higher than the set, the distracted driving alert detection will be enabled.
Release speed for driver fatigue alert (km/h)	Below the set speed, the driver fatigue alert will be lifted.
Trigger speed for driver fatigue alert (km/h)	If the speed is higher than the set, the driver fatigue alert detection will be enabled.
Release speed for call alert (km/h)	Below the set speed, the call alert will be lifted.
Trigger speed for call alert (km/h)	If the speed is higher than the set, the call alert detection will be enabled.

5.12 Fast Starting the MYCOM Tool

After Meitrack Manager starts, you can use the keyboard shortcut Ctrl+Alt+M to switch to the MYCOM serial port tool. The MYCOM tool will print the current running status of the device and data that is uploaded to the server, so that users can learn about the current working status of the device.

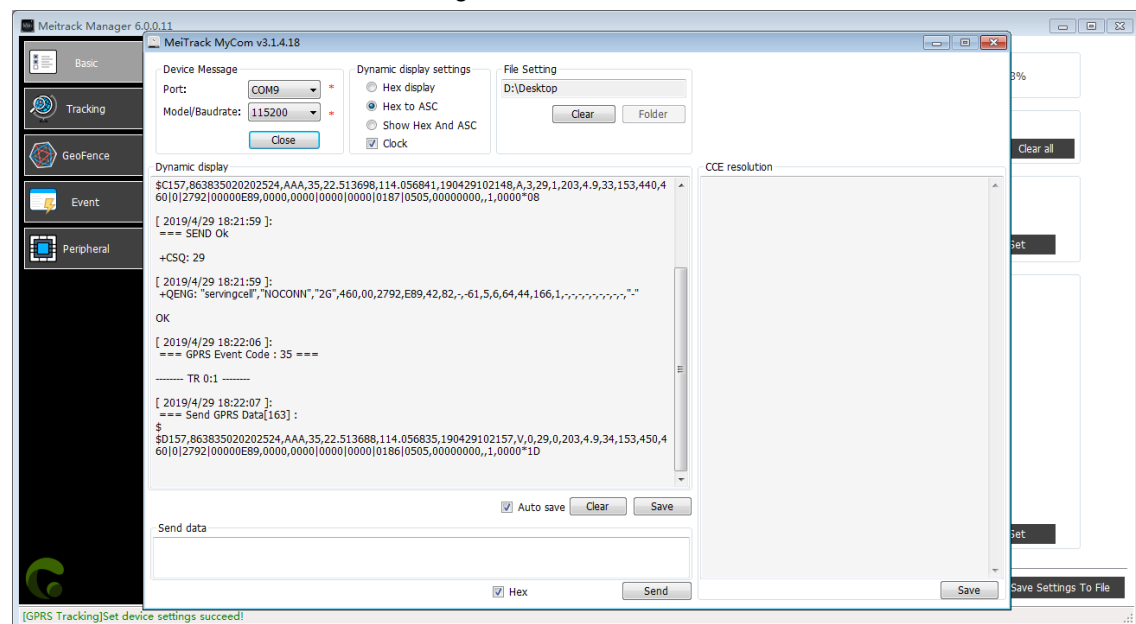


If you want to know more about GPRS data formats, see the *MEITRACK GPRS Protocol*.

5.13 Fast Switching to the Device Info Dialog Box


After Meitrack Manager starts, you can use the keyboard shortcut Ctrl+Alt+C to switch to the Device Info dialog box. Or click "Self-Check" as shown in the picture below.

The following device status information is displayed on the Device Info dialog box: GSM Status, SIM Card Status, APN,

CSQ (GSM signal strength), GPRS Status, Location Status, GPS Ant Status, Flash Status, Input Port Status, and Output Port Status. With the above information, users can view and determine the current working status of the device. At present, the new firmware of the following devices supports this function:

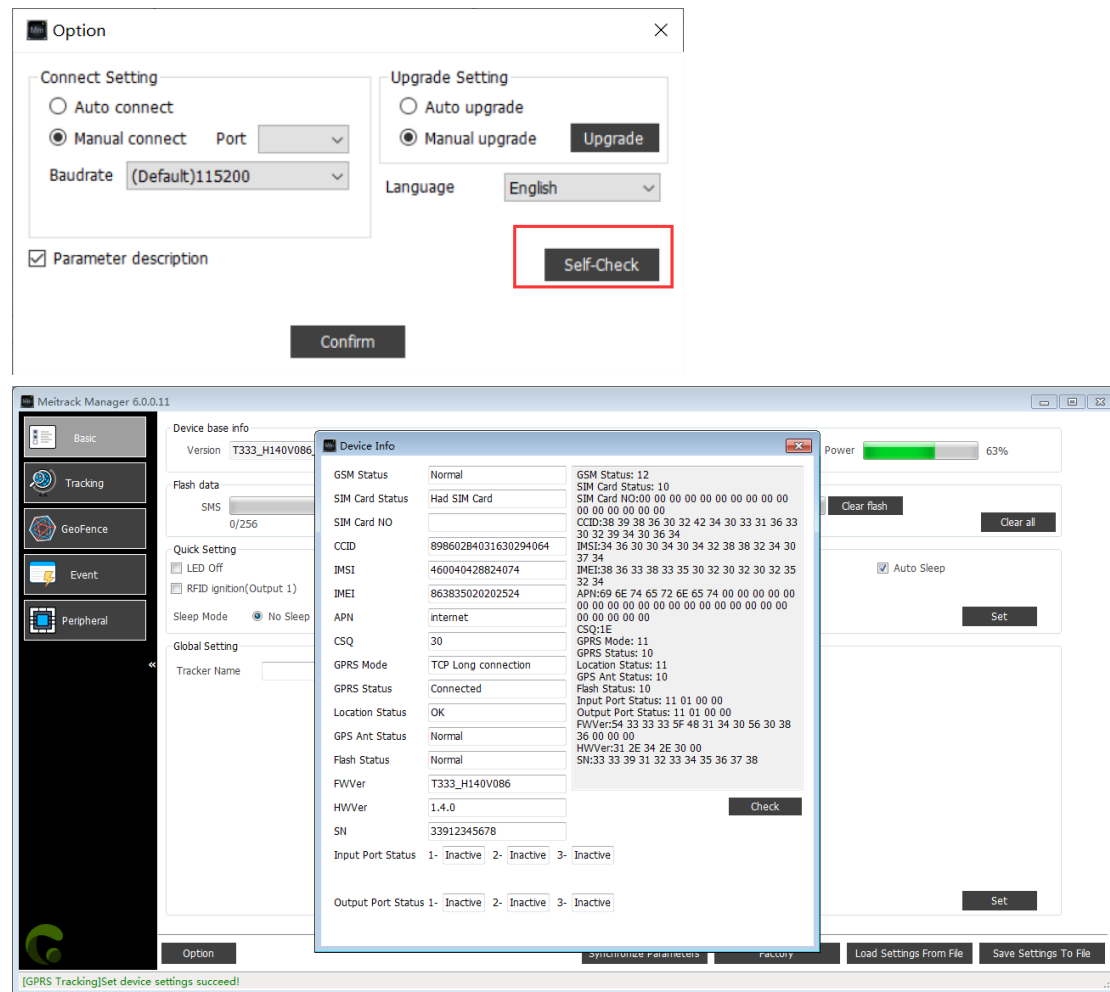

5.14 Option Settings

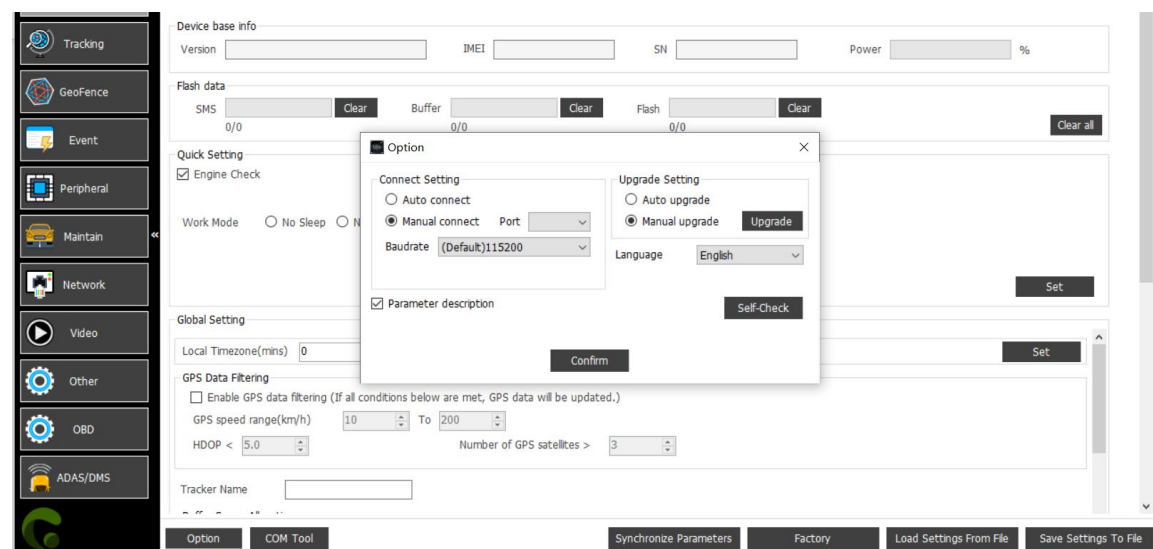

Parameter	Description
Connect Setting	<p>There are two connection methods as follows:</p> <ul style="list-style-type: none"> ● Auto connect: After the driver is installed and the device is connected properly, the computer will automatically detect the corresponding port and you do not need to manually set the port on Meitrack Manager. ● Manual connect: If the port fails to be automatically detected, select Manual connect to manually set the port.
Upgrade Setting	<p>There are two upgrade methods as follows:</p> <ul style="list-style-type: none"> ● Auto upgrade: When the software starts running, the existing version will be compared with the latest version. If the latest version exists, the software will be automatically updated. You are advised to select this option and make sure that the network is connected properly. ● Manual upgrade: If customized software is used or you do not want to update software automatically, select this option. <p>Click Upgrade to manually compare the software versions. If a new version exists, the software will be automatically updated.</p>
Option	You can select Baud rate and Port as required. The self-adaptive mode is supported by default.
Language	<p>To set the software language, select a language from the Language drop-down list. Chinese and English languages are supported.</p> <p>After the language is switched, the software will be automatically restarted.</p>
Confirm	Click Confirm to confirm the settings.
Enter MYCOM	<p>After Meitrack Manager starts, you can use the keyboard shortcut Ctrl+Alt+M to switch to MYCOM tool.</p> <p>MYCOM and Meitrack Manager cannot be used at the same time.</p>

If you have any questions, do not hesitate to email us at info@meitrack.com.